


High-definition camera pen manual

六. the structure diagram

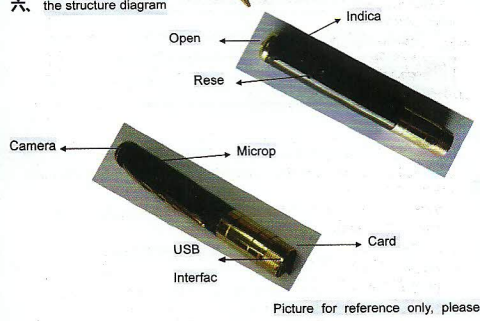

七. Introduction

This product is a high-definition audio and video capture function of a digital pen that can capture and store high-definition video with sound. Is a simple, small and exquisite, beautiful and practical, easy to carry features for business, education, security, media, justice, tourism, health, life and other areas of essential utilities, deeply favored customers.

八. operation instructions

7. Switch Machine: Long press the button two seconds to complete the boot into standby mode, this time a long green indicator light cameras; in a light lit in any state, long press to open the key, the camera will automatically save the current photo recorded in the file and shut down
8. Recording Video: camera into the camera to wait for the state, this time a long green light, long press the button, the green light flashes three times to start video; short press the button again to stop recording, save the file, this time to restore a long bright red and green; in order to ensure shot file size and security, the system will automatically save every 50 minutes, once a file, and continue recording.
9. Photo: boot, after the camera into the camera to wait for the state, this time a long green light, short press the button, the green light flashes about to start taking pictures and save; press time, the green light flashes about to start taking pictures and save; cycle.
10. PC Camera: boot in any mode of state, to connect a computer USB port, you can enter the PC Camera (webcam) mode, in this mode, you can use the camera as a PC camera, with your friends online video chat, shooting emoticons, and so on.
11. Connected to a computer: In the off state or standby state, can be connected to a computer at this time, the computer will pop up a removable disk logo, image file directory as follows: * Plate \ _REC \ 100MEDIA; need to uninstall the camera, please click on the task bar bottom right corner of the mobile device management icons inside uninstall the removable storage device, to be systematically identified After the hardware can be safely pulled out, then disconnect the camera and computer connections.
12. Set the time: the camera provides a video file to display the time recording function, you may need to set the time according to the actual value; time display format: "year. Dated. Day: minutes: seconds", set the time as follows:
 - a. pen the "time" a text document, enter the time settings inside the string, the string by "date when the minutes and seconds," composed of several parts, to set the time, to set the following format: 2009.01.01 12.01.01 Y
The format string portion of the time you want to set time value, pay attention to date in the spaces with the minutes and seconds.
 - b. To confirm time setting file has been copied to the root directory, uninstall the hardware, boot, time is set to complete.
 - c. Setting a good time will be saved to the camera inside.

Exception handling:

Camera storage space is insufficient, while in the green and red light flashes about 5 seconds later, automatically save the current image file and shut down. If you want to continue to use the camera, in the image on the computer back up important files, and delete the memory of the old files to free up enough storage space;

Camera battery is insufficient margin will be alternately flashes green and red light about 5 seconds later, automatically save the current image file and shut down. If you want to continue to use the camera, please charge.

The camera due to accidental causes improper operation or other special stopsresponding , you can use toothpicks and other non-metallic thin rod stretching reset holeto reset.

九. the relevant parameters

Item	Parameters
Video Format	AVI
Video Codein	M-JPEG
Video Resolution	720*480 VGA
Video frame rate	30FPS±1FPS
Player	Or mainstream operating system comes with audio and video playback software
Image ratio	4:3
Support System	Windows me/2000/xp/2003/vista
Charge voltage	DC-5V
Interface	Mini USB interface
Storage support	TF Card
Battery Type	High-capacity polymer lithium battery

十. Notes

- a) use the occasion: Please strictl abide b relevant state laws, this product can not be used for any unlawful purpose, or penit.
- b) With regard to the battery: With the growth in use of time, the battery will be shortened working hours. Long-term is not used, Please fully charged before use.
- c) file security: This product is non-professional storage devices, internal storage of documents does not guarantee the integrity and security, real-time on the computer or other storage device to back up your important documents.
- d) video quality: This product is non-professional video recording equipment, do not guarantee the effectiveness of video files to achieve your expectations
- e) Working Temperature :0-40 ° C.
- f) Operating humidity: 20%-80%, do not place wet product work environment, the product does not have the waterproof function.
- g) shoot illumination: Do not facing the camera directly to the sun and other strong light source, so as to avoid optical devices damaged.
- h) cleaning request: Do not dust density in the environment is too large to use in order to avoid dust contamination of lenses and other components affect the camera effects. Lens glasses with lens cleaning paper or cloth gently wipe to keep clean.
- i) Other matters: The product belongs to sophisticated electronic products, please do not make it have a strong impact, vibration; do not in strong magnetic fields, strong electric field to use.
- j) Supplementary Note: other non-specified matters please contact your local dealer.